

Real-Time & Embedded Systems 2019

Physical Coupling

Uwe R. Zimmer - The Australian National University

Physical Coupling

References

[Edler2003] Edler et al.
Noise temperature measurements for the determination of the thermodynamic temperature of the melting point of palladium.
Metrologia (2003) vol. 41 (1) pp. 47-55

[Peacock97] G. R. Peacock
Standards for temperature sensors.
<http://www.temperatures.com/resources/standards/> (1997)
(additional data-sheets)

© 2019 Uwe R. Zimmer, The Australian National University

page 232 of 367 (chapter 2: "Physical Coupling" up to page 262)

Real-Time Systems Components: Physical coupling

The diagram illustrates the physical coupling between a Real-Time System and its environment. The system is composed of several interconnected components:

- Processors:** The central processing units of the system.
- Communication Interface:** Modules that facilitate communication between different parts of the system and external entities.
- IO Interface:** Modules that handle data exchange between the system and the environment.
- Sensors:** Devices that detect physical phenomena in the environment and provide input to the system.
- Actuators:** Devices that interact with the environment to produce physical effects.

Arrows indicate the flow of information and energy between these components. Dashed lines represent the physical phenomena in the environment that are sensed by sensors and actuated by actuators. The overall interaction is labeled as "Physical coupling".

© 2019 Uwe R. Zimmer, The Australian National University

page 233 of 367 (chapter 2: "Physical Coupling" up to page 262)

Physical Coupling

Definition

First step to embed a system into the real world:

Transform **physical phenomena into electrical signals**

Usual intention:

Transform **one dominant phenomenon into one electrical signal**

e.g. speed, pressure, brightness, loudness, colour, force, humidity, distance, salinity, density, radioactivity, spectrograms, reflectivity, acceleration, conductivity, power, turbulence, deformation, ..., ...; or: temperature

© 2019 Uwe R. Zimmer, The Australian National University

page 234 of 367 (chapter 2: "Physical Coupling" up to page 262)

Physical Coupling

Phenomena to voltage

Measuring temperature



Some observable effects of temperature changes:

- Mean square noise voltage changes
- Volume changes (gas, liquids, metals)
- Thermovoltage changes
- Changes in conductors and semiconductors
- State changes: into solid, liquid, or gaseous

© 2019 Uwe R. Zimmer, The Australian National University

Page 235 of 961 (chapter 2: "Physical Coupling" up to page 262)

Measuring temperature

Some observable effects of temperature changes:

- Mean square noise voltage changes
- Volume changes (gas, liquids, metals)
- Thermovoltage changes
- Changes in conductors and semiconductors
- State changes: into solid, liquid, or gaseous

© 2019 Uwe R. Zimmer, The Australian National University

Page 235 of 961 (chapter 2: "Physical Coupling" up to page 262)

Physical Coupling

Phenomena to voltage


Measuring temperature (Thermoelements)



Thermocouple

Connect two conductors A and B (of different Seebeck coefficients K_A and K_B) on one end.

Place the connected end into the temperature zone T_1 which is to be measured.

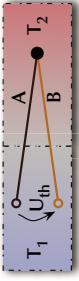

$U_{th} = K_A(T_1 - T_2) + K_B(T_2 - T_1) = (K_A - K_B)(T_1 - T_2)$

$\Rightarrow T_2 = T_1 - \frac{U_{th}}{(K_A - K_B)}$ with T_1 known.

© 2019 Uwe R. Zimmer, The Australian National University

Page 237 of 961 (chapter 2: "Physical Coupling" up to page 262)

Physical Coupling

Measuring temperature (Thermoelements)

Seebeck Coefficient



$E_{th} = K \cdot \text{grad}(T)$, with K being the Seebeck coefficient (material constant of conductors)

Some observable effects of temperature changes:

- Mean square noise voltage changes
- Volume changes (gas, liquids, metals)
- Thermovoltage changes
- Changes in conductors and semiconductors
- State changes: into solid, liquid, or gaseous

© 2019 Uwe R. Zimmer, The Australian National University

Page 236 of 961 (chapter 2: "Physical Coupling" up to page 262)

$E_{th} = K \cdot \text{grad}(T)$, with K being the Seebeck coefficient (material constant of conductors)



$$U_{th} = \int_0^L E_{th} dl = \int_0^L K \cdot \text{grad}(T) dl = K(T_0 - T_l)$$

This phenomena stems from the characteristics of electrons to transfer electric potentials as well as to react to heat.

© 2019 Uwe R. Zimmer, The Australian National University

Page 236 of 961 (chapter 2: "Physical Coupling" up to page 262)

Physical Coupling

Measuring temperature (Thermoelements)

Seebeck Coefficient



Seebeck Coefficient

Standard thermocouples come prefabricated for different applications:

Short name	Material	T_{max}	U_{th} with 0° to T_{max}	$K_A - K_B$
(T)	Cu-Constantan	400 °C	21.000 mV	42.5×10^{-6}
(J)	Fe-Constantan	700 °C	39.720 mV	53.7×10^{-6}
(K)	NiCr-Ni	1000 °C	41.310 mV	41.1×10^{-6}
(S)	PtRh-Pt	1300 °C	13.138 mV	6.43×10^{-6}

© 2019 Uwe R. Zimmer, The Australian National University

Page 236 of 961 (chapter 2: "Physical Coupling" up to page 262)

Thermocouple

Standard thermocouples come prefabricated for different applications:



Short name	Material	T_{max}	U_{th} with 0° to T_{max}	$K_A - K_B$
(T)	Cu-Constantan	400 °C	21.000 mV	42.5×10^{-6}
(J)	Fe-Constantan	700 °C	39.720 mV	53.7×10^{-6}
(K)	NiCr-Ni	1000 °C	41.310 mV	41.1×10^{-6}
(S)	PtRh-Pt	1300 °C	13.138 mV	6.43×10^{-6}

© 2019 Uwe R. Zimmer, The Australian National University


Page 238 of 961 (chapter 2: "Physical Coupling" up to page 262)

Physical Coupling

Measuring temperature (Thermoelements)

Thermocouple

Linearity of some standard thermocouples:

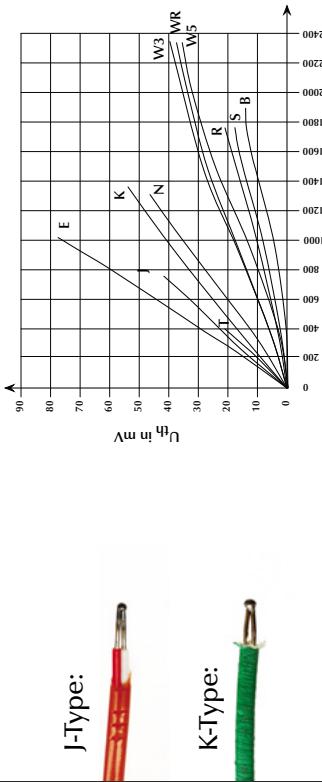

© 2019 Uwe R. Zimmer, The Australian National University

Page 239 of 961 Chapter 2: "Physical Coupling" up to page 262

241

Physical Coupling

Measuring temperature (Thermoelements)

Applications of standard thermocouples

- (TYPE T) Copper-Constantan thermocouples are suitable for subzero temperatures with an upper temperature limit of 371 °C and can be used in vacuum, oxidizing, reducing or inert atmospheres.
- (TYPE R) Platinum - Platinum thermocouples are suitable for continuous use in oxidizing or inert atmospheres at temperatures up to 1482 °C.
- (TYPE S) Platinum 10% Rhodium - Platinum thermocouples are suitable for continuous use in oxidizing or inert atmospheres at temperatures up to 1482 °C.
- (TYPE B) Platinum 30% Rhodium - Platinum 6% Rhodium thermocouples are suitable for continuous use in oxidizing or inert atmospheres and short-term use in vacuum atmospheres at temperatures up to 1705 °C.
- (TYPE W) Tungsten - Rhenium Alloy thermocouples are used to measure temperatures up to 2760 °C. These thermocouples have inherently poor oxidation resistance and should be used in vacuum, hydrogen or inert atmospheres.

© 2019 Uwe R. Zimmer, The Australian National University

Page 241 of 961 Chapter 2: "Physical Coupling" up to page 262

Physical Coupling

Measuring temperature (Thermoelements)

Applications of standard thermocouples

- (TYPE N) Nicrosil-Nisil thermocouples are suitable for use in oxidizing inert or dry reducing atmospheres. Must be protected from sulphurous atmospheres. Very accurate at high temperatures. Virtually the same emf (electromotive force) and range as Type K.
- (TYPE E) Iron-Constantan thermocouples are suitable for use in vacuum, oxidizing or inert atmospheres. Suitable for measuring temperatures up to 760 °C for largest wire size.
- (TYPE K) Chromel-Alumel thermocouples are suitable for continuous use in oxidizing or inert atmospheres up to 1260 °C for largest wire size. Because their oxidation resistance characteristics are better than those of other base metal thermocouples, they find widest use at temperatures above 538 °C.
- (TYPE E) Chromel-Constantan thermocouples are suitable for use up to 781 °C in oxidizing or inert atmospheres for largest wires. Type E thermocouples develop the highest emf per degree of all commonly used thermocouples.

© 2019 Uwe R. Zimmer, The Australian National University

Page 240 of 961 Chapter 2: "Physical Coupling" up to page 262

242

Physical Coupling

Measuring temperature (Thermoelements)

Thermocouple

- Contra:
- Requires stable amplifier.
 - Temperature differences only.
 - Cables between the amplifier and the sensor need to be of the same Seebeck coefficient.


© 2019 Uwe R. Zimmer, The Australian National University

Page 242 of 961 Chapter 2: "Physical Coupling" up to page 262


Physical Coupling

Measuring temperature (Resistors)

Thermoresistors

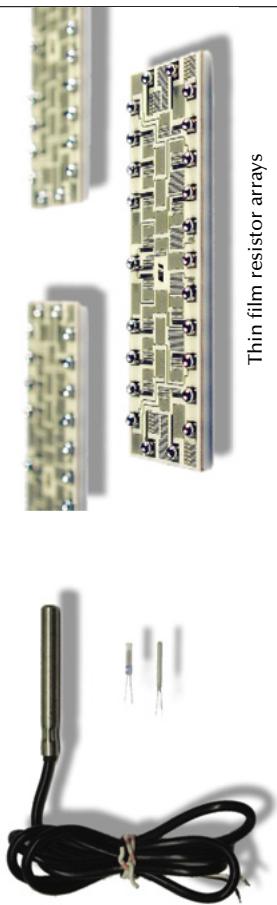

PT100 casings

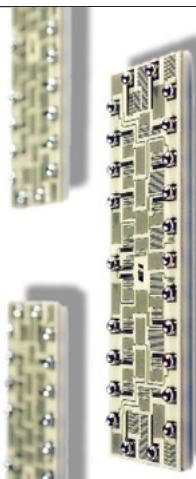

Thin film resistor arrays

PT100 resistors are commonly manufactured as (thin film) Platinum wire on / around glass / ceramic tubes / plates.

© 2019 Uwe R. Zimmer, The Australian National University
Page 245 of 961 Chapter 2: "Physical Coupling" up to page 262]

© 2019 Uwe R. Zimmer, The Australian National University
Page 245 of 961 Chapter 2: "Physical Coupling" up to page 262]

Physical Coupling

Measuring temperature (Resistors)

Thermoresistors: Heating & Measuring

Assume the PT100 to be potted in a TO18 enclosure:

$$\text{Thermal resistance: } R_{th} = \frac{T_{PT100} - T_E}{P_V} = 480^\circ\text{C}/W$$

Assume we want to limit the sensing error to $\pm 0.5^\circ\text{C}$ around 0°C ($R_T = 100\Omega$):

$$\begin{aligned} R_{th} &= \frac{T_{PT100} - T_E}{P_V} \Rightarrow P_V = \frac{\Delta T}{R_{th}} = \frac{U^2}{R} \Rightarrow U = \sqrt{\frac{\Delta T \cdot R}{R_{th}}} \\ &\Rightarrow U_{max} = \sqrt{\frac{\Delta T \cdot R_I}{R_{th}}} \approx 0.323\text{V} \end{aligned}$$

Thus in order to prevent heating the sensor element by more than 0.5°C we need to keep the operating voltage under 0.323V.

© 2019 Uwe R. Zimmer, The Australian National University
Page 245 of 961 Chapter 2: "Physical Coupling" up to page 262]

Physical Coupling

Measuring temperature (Resistors)

Thermoresistors

General case: $R_T = R_0[1 + A(T - T_0)^2 + B(T - T_0)^3 + \dots]$
Platinum: $A \approx 3.27 \times 10^{-3} \frac{1}{K}$ (at 550°C) ... $4.2 \times 10^{-3} \frac{1}{K}$ (at -150°C)



PT100

- Calibrated value: $0^\circ \Rightarrow R_T = 100\Omega \pm 0.1\Omega$; $0.1\Omega \Rightarrow \pm 0.26\text{K}$
- Range: $-200^\circ\text{C} \dots +650^\circ\text{C}$
- Response time: $\approx 0.1\text{s}$ in flowing water
... multiple seconds in still air.

© 2019 Uwe R. Zimmer, The Australian National University
Page 244 of 961 Chapter 2: "Physical Coupling" up to page 262]

Physical Coupling


Measuring temperature (Resistors)

Thermoresistors: Connections

Separating currents from signals Four wire setup:

Further measures:

- Adding a reference resistor.
- Limit the cable length.
- Keeping all cables on the same temperatures.
- Limit the current.
- Model the non-linearity on the sensor itself.

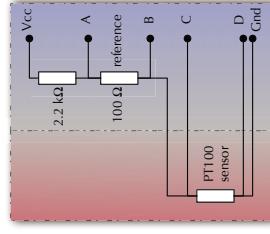

© 2019 Uwe R. Zimmer, The Australian National University
Page 246 of 961 Chapter 2: "Physical Coupling" up to page 262]

Physical Coupling

Measuring temperature (Thermoelements)

Thermoresistors

- Pro:**
- Potentially higher accuracy.
 - Less non-linearities.
 - Long term stability.
 - Absolute temperature.
 - Cheap.
 - Can be accurate if combine with compensation for non-linearities.
 - Large effects with temperatures (easy instrumentation).
 - Long term stability (some models).
- Contra:**
- Limited temperature range ($-200^{\circ}\text{C} \dots +650^{\circ}\text{C}$).
 - Slower reaction time.
 - More expensive.
 - Less robust.
 - Usually bigger.

© 2019 Uwe R. Zimmer, The Australian National University

Page 247 of 961 (chapter 2: "Physical Coupling" up to page 262)

Physical Coupling

Measuring temperature (Thermistors)

Temperature Sensitive Semi-conductors

Pro:

- Cheap.
- Can be accurate if combine with compensation for non-linearities.
- Large effects with temperatures (easy instrumentation).
- Long term stability (some models).

Contra:

- Further limited temperature range ($-40^{\circ}\text{C} \dots +350^{\circ}\text{C}$).
- "Strongly" non-linear.
- Comparatively large.
- Generally instable and inaccurate.


© 2019 Uwe R. Zimmer, The Australian National University

Page 249 of 961 (chapter 2: "Physical Coupling" up to page 262)

Physical Coupling

Measuring temperature (Thermistors)


Temperature Sensitive Semi-conductors

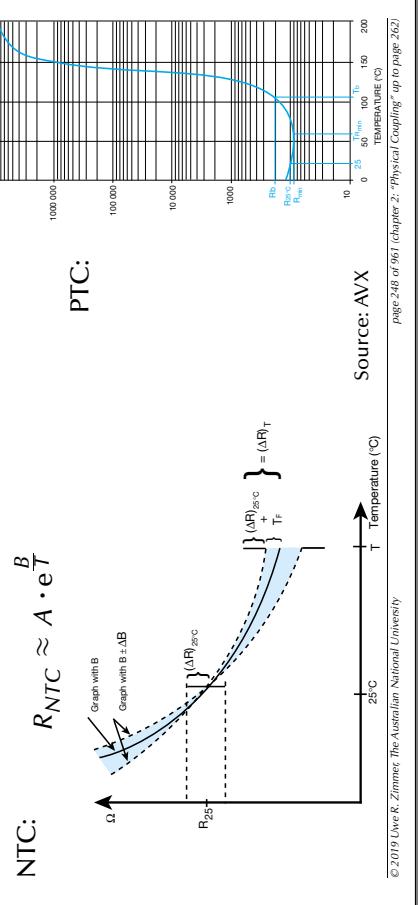

Physical Coupling

Measuring temperature (Noise Voltage)

Noise temperature measurement

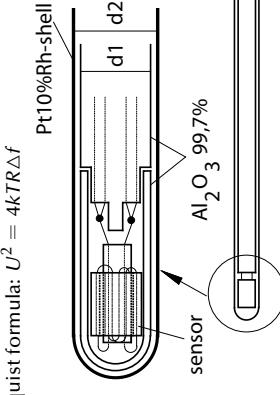

Based in Nyquist formula: $\overline{U^2} = 4kTR\Delta f$

(source: Physikalisch-Technische Bundesanstalt, Berlin)
with k : Boltzmann constant, T : thermodynamic temperature,
 R : electric resistance, and Δf : the measurement bandwidth.

Page 250 of 961 (chapter 2: "Physical Coupling" up to page 262)

© 2019 Uwe R. Zimmer, The Australian National University

Physical Coupling

Measuring temperature (Noise Voltage)

Noise temperature measurement

Pro:

- Linear.
- Highly accurate.
- Long term stability.
- Wide temperature range:
 $1\text{...}2500^\circ\text{K}$,
 at $\pm 0.1\%$ accuracy
 over the full range.

© 2019 Uwe R. Zimmer, The Australian National University

Page 251 of 961 Chapter 2: "Physical Coupling" up to page 262]

Physical Coupling

Phenomena to voltage

First conclusions

... we only scratched the surface of conversion methods for one physical value (temperature).

☞ Converting physical phenomena into analogue voltages seems to be a complex matter.
 ... in fact a whole industry is dedicated to this field exclusively.

☞ Always ask for the full sensor specifications (and read them).

☞ Never assume that the voltage output is a linear translation of a single physical value.

*Physical coupling is not the only loss afflicted stage of conversion,
 yet it is often the most complex one.*

© 2019 Uwe R. Zimmer, The Australian National University

Page 253 of 961 Chapter 2: "Physical Coupling" up to page 262]

Physical Coupling

Phenomena to voltage

Further methods of measuring temperature ...

- Spreading resistors.
- Piezos and other temperature sensitive crystals.
- Temperature controlled current sources (e.g. AD590).
- Watch Mercury filled thermometers with cameras.
- Sense blackbody radiation
- (e.g. infrared-, or more generally: thermal radiation-thermometers)
- ...

© 2019 Uwe R. Zimmer, The Australian National University

Page 252 of 961 Chapter 2: "Physical Coupling" up to page 262]

Physical Coupling

Phenomena to voltage

Range and relative speed measurements

Some commonly employed principles:

- Triangulation (optical)
- Time of flight (optical, acoustical, electro-magnetic)
- Phase correlation (optical, acoustical, electro-magnetic)
- Intensity (optical, acoustical)
- Doppler methods (acoustical, electro-magnetic)
- Interferometry (optical, electro-magnetic)

© 2019 Uwe R. Zimmer, The Australian National University

Page 254 of 961 Chapter 2: "Physical Coupling" up to page 262]

Physical Coupling

Phenomena to voltage

Range measurements by triangulation

$$d = b \cdot \tan \alpha$$

- non-linear and poor accuracy for $d \gg b$

- Laser required.
- otherwise simple setup with slow components, often used for liquid level measurements.
- Measures along the optical axis only

© 2019 Uwe R. Zimmer, The Australian National University
Page 255 of 961 Chapter 2: "Physical Coupling" up to page 262]

Physical Coupling

Phenomena to voltage

Range measurements by time of flight / phase

Method: measure the time of flight between the outgoing signal and the received, reflected signal.

In case of light, this method requires high resolution timers ($> 1\text{GHz}$).

- Method is linear.
- The achieved resolution depends on the precision of the signal's rising edge and the resolution of employed timers.
- Signals can be formed and volume measurements are possible.

In order to increase the resolution, the outgoing signals are often modulated and the phase shifts between outgoing and reflected signals are detected.

© 2019 Uwe R. Zimmer, The Australian National University
Page 257 of 961 Chapter 2: "Physical Coupling" up to page 262]

Physical Coupling

Phenomena to voltage

Range measurements by triangulation

$$d = b \cdot \tan \alpha$$

- non-linear and poor accuracy for $d \gg b$

⚠ Occlusion omits readings ⚠ not suited for randomly curved surfaces

© 2019 Uwe R. Zimmer, The Australian National University
Page 256 of 961 Chapter 2: "Physical Coupling" up to page 262]

Physical Coupling

Phenomena to voltage

Range and relative speed measurements

2-d Scanning Laser Range Finders

Hokuyo UTM-30:

- 905 nm semiconductor laser.
- Nominal range: 0.1 ... 30 m outdoors.
- Maximum range: 60 m
- Accuracy: 10...50 mm depending range and background light.
- Coverage: 270°.
- Weight: 210 g.

© 2019 Uwe R. Zimmer, The Australian National University
Page 258 of 961 Chapter 2: "Physical Coupling" up to page 262]

Physical Coupling

Phenomena to voltage

Range and relative speed measurements

2-d Scanning Laser Range Finders

SICK (indoor):

- 905 nm semiconductor laser.
- Maximum range: 80 m.
- Accuracy: 5–10 mm (typical).
- Coverage: 180°, 0.25° resolution.
- Response time: 53 ms.
- Weight: 4.5 kg.
- MTBF: 80,000 h

© 2019 Uwe R. Zimmer, The Australian National University

Page 250 of 961 Chapter 2: "Physical Coupling" up to page 262

Physical Coupling

Phenomena to voltage

Range and relative speed measurements

Ultrasound time-of-flight & Infrared reflected-intensity

Classical "low end" sensors:

- US signal is transmitted and received on the same membrane.
 - Minimal range limitations.
 - Specular reflections lead to potential overestimation.
- IR intensity readings depend on object material.

© 2019 Uwe R. Zimmer, The Australian National University

Page 261 of 961 Chapter 2: "Physical Coupling" up to page 262

Physical Coupling

Phenomena to voltage

Range and relative speed measurements

2-d Scanning Laser Range Finders

SICK (indoor):

- 905 nm semiconductor laser.
- Maximum range: 80 m.
- Accuracy: 5–10 mm (typical).
- Coverage: 180°, 0.25° resolution.
- Response time: 53 ms.
- Weight: 4.5 kg.
- MTBF: 80,000 h

© 2019 Uwe R. Zimmer, The Australian National University

Page 260 of 961 Chapter 2: "Physical Coupling" up to page 262

Range [m]	LMS 211 [%]	LMS 221 [%]	LMS 231 [%]	LMS 391 [%]
0	100	100	100	100
10	~80	~75	~70	~65
20	~60	~55	~50	~45
30	~40	~35	~30	~25
40	~25	~20	~15	~10
50	~15	~10	~8	~5
60	~10	~7	~5	~3
70	~5	~3	~2	~1
80	~2	~1	~1	~0.5

(source: SICK AG, Germany)

Black leather: ≈2% reflectivity

Physical Coupling

Phenomena to voltage

Speed measurements: Doppler current profilers

Doppler shift frequency: $f_d = -2f_s \frac{v}{c}$

with source frequency f_s , relative velocity v and signal speed c .

- Signal: 250 kHz - 3 MHz
- Range: 160 m,
- Accuracy: $\pm 1\%$
- Velocity range: $\pm 10 \text{ m/s}$
- Blanking zone: 0.2–2.0 m

© 2019 Uwe R. Zimmer, The Australian National University

Page 262 of 961 Chapter 2: "Physical Coupling" up to page 262

Page 262 of 961 Chapter 2: "Physical Coupling" up to page 262

Page 261 of 961 Chapter 2: "Physical Coupling" up to page 262

Page 260 of 961 Chapter 2: "Physical Coupling" up to page 262



Summary

Physical coupling

- **Physical phenomena**
- **Measuring temperature**
 - Thermoelements, thermocouples, Thermoresistors, Thermistors, Noise temperature measurement) and many others ...
- **Measuring range and relative speed**
 - Triangulation, Time of flight, Intensity, Doppler methods, Interferometry
- Examples: **Common acoustical and optical sensors**